


TGR-86 WIFI THERMOSTAT USER GUIDE

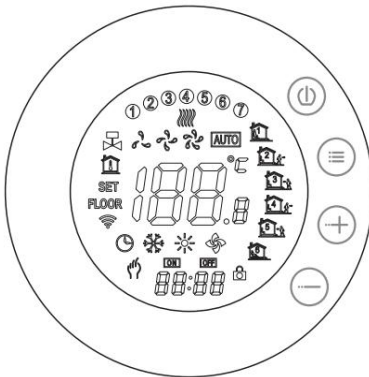

THIS THERMOSTAT IS SUITABLE FOR WATER HEATING,
ELECTRIC HEATING AND GAS BOILER

Welcome

Thank you for your trust and support. By adopting higher-end technology and more perfect technology, your new thermostat will provide you with the right temperature environment every day in the future, making your life more comfortable and your living environment more stylish and beautiful. For detailed instructions on the installation and use of this thermostat, please read this manual carefully. Please contact a professional to install the thermostat for you and install and use the product to the extent permitted by law

Application

Intelligent digital temperature controller is a floor heating system suitable for room temperature control and household temperature control. It controls the operating state of the floor heating equipment by comparing the ambient temperature with the set temperature, which improves comfort and achieves energy saving. This digital temperature controller adopts microcomputer control technology and is equipped with full-screen display touch buttons, which is elegant in design and easy to use. The thermostat has manual automatic, programmable and state memory functions.

Product packaging

Thermostat host----- 1 PC
Qualification certificate----- 1 PC
Sensing line (optional)----- 1 PC

Manual----- 1 PC
Screw----- 2PCS

Product Model


WP Plumbing 3A
EP Electric Heating 16A
WPB linkage, gas boiler 3A

User Notes

1. Please read this manual carefully. Improper operation may damage the product or cause dangerous conditions.
2. The installation personnel must be well-trained and experienced service technicians.
3. After installation, please read this manual carefully and operate the product according to the instructions.

Caution: Risk of electric shock or equipment damage.

Wiring Diagram

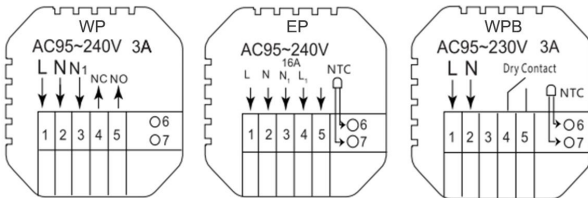


Note: WP for water heating; EP for electric heating; WPB for gas boiler

Installation procedure


This product is installed with a standard 86 control switch (in compliance with European regulations)



1. Slide the mounting plate upward in this direction

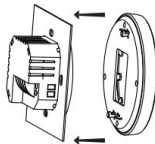

2. Remove the mounting plate in this direction

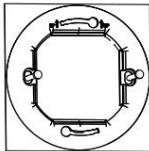


3. Fix mounting plate to cassette with screw







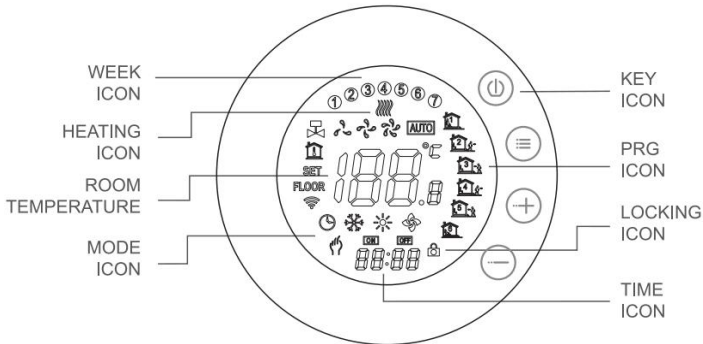






4. After installation, buckle the product in this direction






Description of display & Icon
















Operating Instruction



1. Power on/off: press  to turn on/off the thermostat.
2. Press the  key to switch between manual and automatic modes.
3. In the automatic mode, press  or  to adjust the temperature to enter the automatic temporary mode. This mode runs for only one session.
4. Long press  key and  key to enter the clock setting, press key to switch Settings Item, press  and  keys to adjust the value of each parameter. Note: the time of WIFI model will be Automatically gets Internet time
5. Press  and  for 5 seconds to add or cancel the child lock.
6. WIFI link: When the thermostat is on, long press  button for 5 seconds and the thermostat display will come out Now the WIFI icon flashes, at this time the thermostat into the state of code.





Time programming instructions

Press and hold the  key to enter the programming setting, short press the  key to switch the option, press the  key or  key to adjust each option parameter, and press the  key to exit and save.

KEY	OPTION		ICON	TIME	ADJUST	DEFAULT	ADJUST
	workday	1		06:00		20°C	
		2		08:00		15°C	
		3		11:30		15°C	
		4		12:30		15°C	
		5		17:00		22°C	
		6		22:00		15°C	
	Holiday	1		08:00		22°C	
		2		23:00		15°C	

 Advanced options

When POWER OFF, press the  key and the  key for 5 seconds to enter the advanced option setting.

Press  to enter the next option, press  and  to adjust, and press  to exit the height Level option.

1	Temperature compensation	The default value of the calibration room temperature is -2 °C. Press the up and down keys to adjust. The adjustable range is 9.9 °C to -9.9 °C.
2	Sensor selection	The temperature sensor is selected as IN by default. Press the up and down keys to adjust as IN respectively, indicating that the internal.
3	Modify the temperature limit	The default temperature limit value is 35 °C. Press the up and down keys to adjust the range from 5 °C to 60 °C.
4	Temperature difference start	The default temperature difference is set to 1 °C. Press the up and down keys to adjust the range to 1-10 degrees.
5	Antifreeze fundion	Set the default anti-freeze function to OFF, display OFF, press the up key to tum on anti-freeze and display ON
6	Holiday option and turn off weekly programming	Set tfr default rest day as double OFF. Press the up and down keys to adjust It to double OFF (1-5), single OFF (1-6), no OFF (1 -7) and tum off week programming (OFF).
7	Primary and secondary reverse selection	Set the default main and auxiliary reversal to 0. Press the up and down keys to adjust 0 to tum off the main and auxiliary reversal. 01 means auxiliary reverse, 02 means auxiliary reverse, 03 means main and auxiliary reverse, shutdown and antifreeze is not on, stop output
8	Passive linkage output delay time	Set the default passive linkage delay time to 0. Press the up and down keys to adjust the range of 0-5 minutes.
9	Set upper temperature limit	The default value of the set temperature upper limit is 60 °C, and the adjustment range Is 35-95 °C by pressing the up and down keys.
10	Restore Fartory Defaults	Set to restore the factory default setting to display "--", Press the up button to adjust tfr display "----", press the enter button to restore the factory settings

About WIFI connection

Before using the WIFI thermostat for the first time, you should set the WIFI signal and configuration through your smart phone or tablet to allow communication between your connected devices.



1. Download the APP

Search for "Tuya" in App market or scan below QR Code to download



TGR-86 WIFI THERMOSTAT USER GUIDE

2.Register Account If you don't have an APP account yet, you can choose to register or log in via SMS verification code. Click "Create a new account", you will enter the Tuya Smart Platform Privacy Policy page. After you click Agree, you will officially enter the mobile phone registration page.

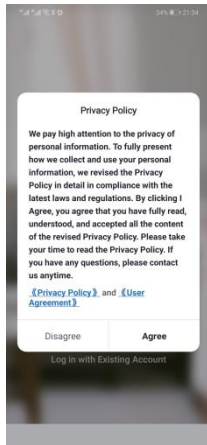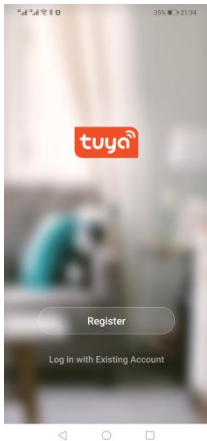

TGR-86 WIFI THERMOSTAT USER GUIDE


The system automatically determines the current country/region. You can also select the country/region manually. After entering your mobile phone number or email address, click "get verification code". Enter the received verification code, then enter the password, and click "finish" to register successfully.

The image displays three sequential screenshots of a mobile application used for registering a TGR-86 WIFI Thermostat. Each screenshot shows a standard Android status bar at the top with signal strength, battery level (34%), and time (21:35 or 21:38). The app interface includes a back arrow in the top left corner.

- Register:** The first screen features the title "Register". Below it is a dropdown menu showing "China +86" with a right-pointing chevron. Underneath is a text input field labeled "Mobile Number/Email". A large, rounded button labeled "Get Verification Code" is positioned below the input field. At the bottom, there is a checkbox followed by the text "I Agree User Agreement and Privacy Policy".
- Enter Verification Code:** The second screen is titled "Enter Verification Code". It contains a horizontal input field with five dashed lines for digit entry. Below this field, a message states: "Verification code has been sent to your mobile phone: 86-13613055496, Resend(57s)".
- Set Password:** The third screen is titled "Set Password". It features a password input field with a strength indicator (a vertical bar) and icons for toggling visibility and clearing the field. Below the field, a red text prompt reads: "6 to 20 characters, including letters and digits". A large, rounded button labeled "Done" is located at the bottom of the screen.



TGR-86 WIFI THERMOSTAT USER GUIDE

3. Add device Click "add device" or "+" on the top right of the APP homepage to enter the "add device" page. Currently, there are two ways to manually add device and search device.

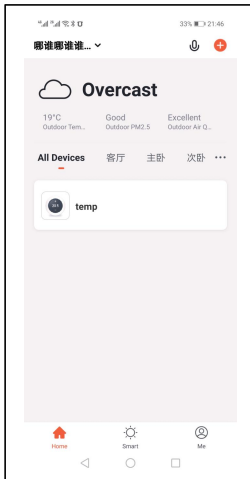



TGR-86 WIFI THERMOSTAT USER GUIDE

Find the thermostat product (WIFI model) in the device list. In the specified network mode, the indicator flashes (slowly flashes) and then click the confirm button on the page. Select the device's work area to connect to the WIFI of the Internet and enter the WIFI password. Click "ok" to enter the matching network process.

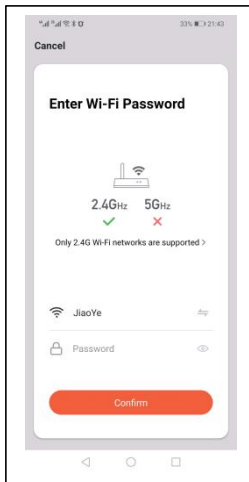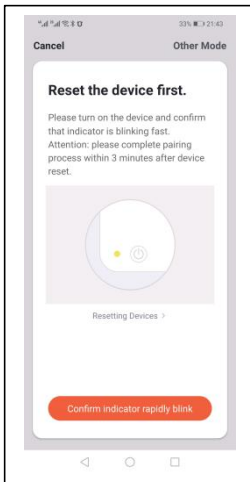


TGR-86 WIFI THERMOSTAT USER GUIDE

If the default mode distribution network is selected, the distribution process APP is shown in figure 1 below, and the distribution network successfully displays the interface shown in figure 2. The name of the device can be changed or the location of the room can be selected.

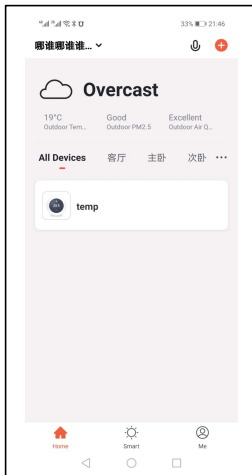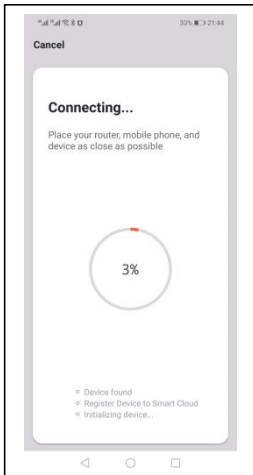

TGR-86 WIFI THERMOSTAT USER GUIDE

If the distribution network fails, the APP will display the page shown in the figure below. You can choose to add or view the help again. Note: if the connection fails, please confirm whether the temperature control device has entered the code matching state, refer to item 6 of the operation manual.

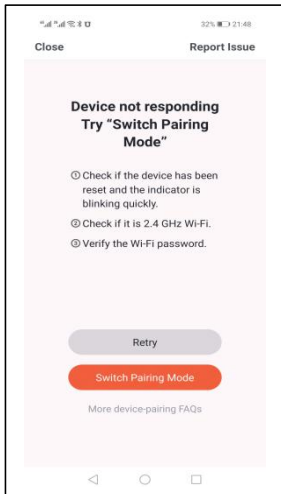

4. Display of temperature controller APP interface

